Not intended to replace the Operator Manual. One is available upon request.

## **Cotton Gandy Machine**

## **Operating Instructions:**

- 1. Plug machine directly into a standard household outlet. The power supply cord is equipped with a machine ground. Always plug into a grounded receptacle for safety.
- 2. Place the machine on a sturdy table or countertop with the controls facing the operator.
- 3. Unscrew the two transport screws located on either side of the floss head. Do NOT run the machine with these screws in the "up" position.
- 4. Place the Floss Bowl on the motor assembly. It rest on the rubber stoppers on the motor assembly. It does not connect or hook to the machine in any way.
- 5. Place the clear plastic bubble on top of the floss bowl if provided. Point the opening on the same side as the machine controls. This is where the operator will stand.
- 6. Fill the floss head with one cup or less of floss sugar. When adding sugar to the floss head, always fill it 90% full to obtain a balanced condition in the head and eliminate vibration. DO NOT add sugar with motor running!
- 7. Turn on both the heat and the motor switches. Turn the heat on high until you start to see the floss forming. Then turn the heat back to a medium setting. After warm up, equipment should make good floss at a reduced setting. Never let the machine operate with the heat so high it produces smoke or causes the sugar to burn.

## **Making Cotton Candy Cones:**

- 1. Pick a cone; if it sticks in the stack of cones, twist it off the stack.
- 2. Hold an inch or two of the pointed end of the cone between two fingers and a thumb. With a light twisting of the cone, roll the cone in the floss building up in the bowl.
- 3. Lift the cone up with the ring of floss attached and rotate the cone to wrap the floss.
- 4. DO NOT roll floss while the cone is inside the bowl. This will pack the floss too tightly.
- 5. CAUTION...the floss head rotates at 3450 RPM. Operator must keep hands and face clear of the floss head. Children should not be permitted to operate.

## **Cleaning:**

- 1. Spin all cotton candy out of head.
- 2. Remove bowl. Clean with soap and water.
- 3. Wipe down the base with a damp cloth. DO NOT submerge base in water. Do not tip upside down.
- 4. To transport, tighten down the silver screws.





